




NoSurvivor® Assembly Instructions

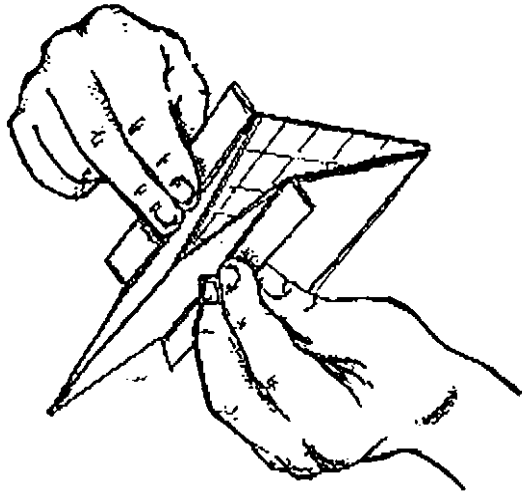


1. In order to form the NoSurvivor® Trap to its intended shape, begin by grabbing the ½" seams along the top and bottom of the trap and pull in opposite directions

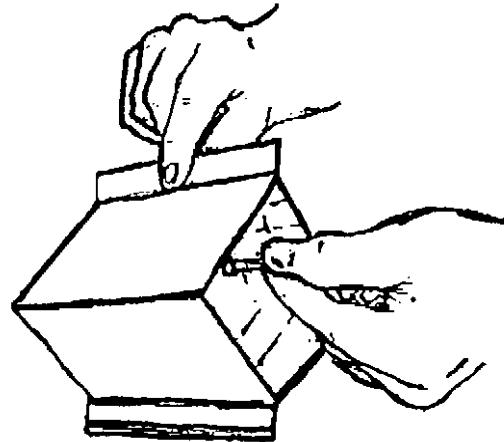

2. Once the the NoSurvivor® is in an open position, place the appropriate pheromone lure on the bottom glue surface of the trap

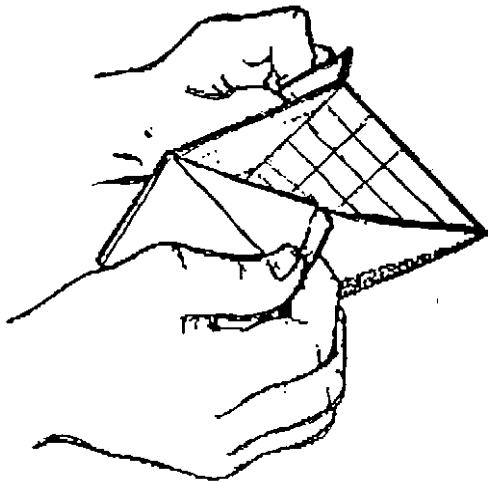

3. Pivot the ends of the bottom seam of the NoSurvivor® upwards into the trap by using the dotted lines as a guide

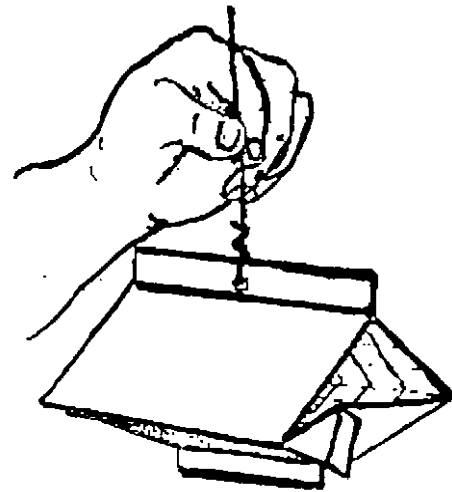

4. ~~Take~~ the twist-tie hanger and secure it through the hole in the trap. Hang the trap close to any insect problem areas making sure it will not be damaged or disturbed